

# ACTIV MENU SETTINGS

Recommended settings for :  
SeaChange



Smarter Live Production Technology

## SERVER SETTINGS:

Mixed Mode

Port id numbers are the same for the record and playback channels.

RS422 pin outs on the breakout box are non standard. Refer to the Sea Change documentation.

Example:

Decoder 1 Port number 0 - Channel A Video Port number 1

Decoder 2 Port number 1 - Channel B Video Port number 2

Encoder 1 Port number 2 - Channel C Video Port number 1

### RJ 45 HT445

Pin 1 Chassis Gnd

Pin 2 = Rx A Data = RxD-

Pin 3= Tx B Data = TxD +

Pin 7= Rx B Data = RxD +

Pin 8= Tx A Data = TxD -

### DB-9 MCL 4012


Pin 3 Gnd

Pin 7 = TxD -

Pin 4 = RxD +

Pin 2 = TxD +

Pin 8 = RxD -

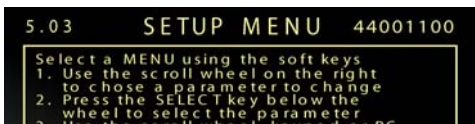

Open menu, from CLIP LIST press SHIFT + ENTER  
or for Cartbox, press SHIFT + S5

	PARAMETER	RECOMMENDED VALUE	YOUR SETTINGS	LOCATION
VDCP	DEVICE TYPE	<i>Set as required</i>	[ ]	CHANNEL MENU
	VIDEO PORT NUMBER	1	[ ]	
	DISK PROTOCOL	VDCP		DISK MENU
	TIMECODE	<i>Set as required</i>	[ ]	
	GOTO COMMAND	JOG	[ ]	
	VARIABLE ID LENGTHS	ON	[ ]	
	PLAYLIST LOAD	00:00:05:00	[ ]	
	PLAYLIST CHANGE	00:00:00:00	[ ]	
	CUE END LATENCY	00:00:00:20	[ ]	
	LOAD LATENCY	5 frames	[ ]	
LOAD WAIT TIME	2000 mSec	[ ]		
VIDEO STANDARD	<i>PAL / NTSC</i>	[ ]	SYSTEM MENU	
LICENCE OPTIONS	<i>View enabled options</i>			
ODETICS/AMF	DEVICE TYPE	<i>Set as required</i>	[ ]	CHANNEL MENU
	DISK PROTOCOL	ODETICS		DISK MENU
	TIMECODE	<i>Set as required</i>	[ ]	
	PLAYLIST LOAD	00:00:05:00	[ ]	
	CUE END LATENCY	00:00:00:05	[ ]	
	EJECT DELAY	0 mSec	[ ]	
	CUE COMMAND	NEW (44 14)	[ ]	
	VIDEO STANDARD	<i>PAL / NTSC</i>	[ ]	SYSTEM MENU
LICENCE OPTIONS	<i>View enabled options</i>			
ENG Adj	DISABLE CHANNEL	<i>Set as required</i>	[ ]	CHANNEL MENU
	COMMS TIMEOUT	<i>Set as required</i>	[ ]	DISK MENU
	LOAD LATENCY	<i>Set as required</i>	[ ]	
				SYSTEM MENU