ACTIV MENU SETTINGS

Recommended settings for :
360 Systems Image Server

HiTech Systems Limited
Smarter Live Production Technology

SERVER SETTINGS:
Cue shows first frame
Vari-Play 1X equals Play
Vari-Play 0 equals Pause
Ignore pre-roll commands
Channels in remote

NOTES
Approx 1 second to load a clip
Approx 0.5 seconds to unload a clip
Jog/Shuttle/Var - not responsive.

Software version [ ] Serial number [ ]

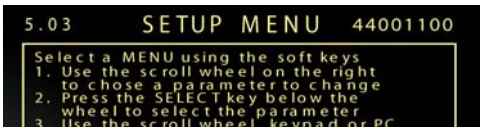

Open menu, from CLIP LIST press SHIFT + ENTER
or for Cartbox, press SHIFT + S5

VDCP

PARAMETER	RECOMMENDED VALUE	YOUR SETTINGS	LOCATION
DEVICE TYPE	*Set as required*	[ ]	CHANNEL MENU
VIDEO PORT NUMBER	1	[ ]	
DISK PROTOCOL	VDCP		DISK MENU
TIMECODE	*Set as required*	[ ]	
GOTO COMMAND	JOG	[ ]	
VARIABLE ID LENGTHS	ON	[ ]	
PLAYLIST LOAD	00:00:05:00	[ ]	
PLAYLIST CHANGE	00:00:00:10	[ ]	
CUE END LATENCY	00:00:00:13	[ ]	
LOAD LATENCY	5 frames	[ ]	
VIDEO STANDARD	*PAL / NTSC*	[ ]	SYSTEM MENU
LICENCE OPTIONS	*View enabled options*		

ODETICS NA

DEVICE TYPE	*Set as required*	[ ]	CHANNEL MENU
DISK PROTOCOL	ODETICS		DISK MENU
TIMECODE	*Set as required*	[ ]	
PLAYLIST LOAD	00:00:05:00	[ ]	
CUE END LATENCY	00:00:00:01	[ ]	
EJECT DELAY	0 mSec	[ ]	
CUE COMMAND	NEW (44 14)	[ ]	
VIDEO STANDARD	*PAL / NTSC*	[ ]	SYSTEM MENU
LICENCE OPTIONS	*View enabled options*		

VTR

DEVICE TYPE	VTR		CHANNEL MENU
TIMECODE	*Set as required*	[ ]	VTR MENU
FRAME OFFSET	00:00:00:02	[ ]	
CUE END LATENCY	00:00:00:01	[ ]	
LIVE TC SOURCE	TC GEN	[ ]	
VIDEO STANDARD	*PAL / NTSC*	[ ]	SYSTEM MENU
LICENCE OPTIONS	*View enabled options*		